

Panasonic®

Operating Instructions

Lens Motor Cover for Projectors

Model No. **ET-D75MC1**

Thank you for purchasing a Panasonic product.

- Read this manual and the projector manual completely, and use this product correctly and safely.

Important Safety Notice Be sure to follow these instructions

In order to prevent harm to people and damage to property, be sure to follow our explanations.

- We will explain the extent of danger and damages caused by incorrect usage.



Warning

[Information concerning possibilities of suffering severe injury and death]



Warning

- **Do not put the attached metal fittings and screws in a place where young children can reach them.**

If consumed by mistake, it will cause harm to the body.



- Please quickly consult a doctor if consumed.

Prohibition

Before attaching


- Remove the projector lens (Zoom lens) from the projector main body before attaching the lens motor cover. With regards to the method of removing/attaching, read the projector manual.
- In order for the projector lens surface to not have fingerprints or dirt, please attach the lens cover to the zoom lens carefully without damaging it before carrying out the work.

TQDH19059-2

Method for attaching

■ Applicable Zoom lens


ET-D75LE1, D75LE2, D75LE3, D75LE4, D75LE6, D75LE8

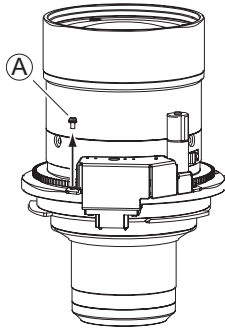

- ① Remove the screw attached to the motor in the diagram
Ⓐ (1 piece).

Attention

- Do not remove any screws other than those specified.
- Properly store the removed screw (1 piece) which is not used.
- The attached screw has a screw lock agent applied to it. When removing, be careful not to get stuck in between the gears.

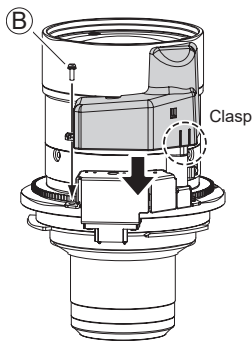

- ② Attach the lens motor cover in the direction of the arrow on the diagram.

Attention

 
- Check that the [clasp] is in place.
- ③ Tighten the attached screw with built-in washer Ⓑ to fix it firmly.

Attention

- When fastening the screw, do not apply force to the connector portion from the top of the lens motor cover.

Accessories

Check that the following accessories are contained.



Cover fixing screw (M3 X 10) 1 piece

Attention

- Dispose of the packaging materials properly after taking the product out of it.

■ Information on Disposal

When discarding the product, please contact your local municipality or the point of sale where you purchased the items for the proper disposal methods.

Panasonic Connect Co., Ltd.

Web Site : <https://panasonic.net/cns/projector/>

© Panasonic Connect Co., Ltd. 2022

SS0710AM2042 -PS